



Be guided by our expert!

How to resurface a concrete floor



Contact our team of technical advisors for more information
on 01483 418 418 or email sales@watco.co.uk

How to apply Flowtop® concrete floor resurfacer

✔ NOTE FROM OUR EXPERT

Damaged and irregular concrete surfaces are not only difficult to clean but they can become very dangerous when left untreated.

Once a surface begins to deteriorate its condition can worsen rapidly, causing all sorts of problems for machinery and people in the workplace.

The Flowtop® range produces a smooth, high strength surface over uneven or damaged concrete.

PRODUCTS USED

Primer:
Included in the pack

Patching compound:
Flowtop®

TOOLS

1 Broom
1 Mixing blade
1 Spiked roller
1 Trowel
Spiked shoes

APPLICATION

Application time:
30 minutes

Curing time:
6 hours

STEP 1: PREPARATION



1. Sweep the area to be resurfaced so that it is clean and free of loose material.



2. If there are traces of oil or grease, clean the area with the help of our biodegradable degreaser, Bio D.



3. The Flowtop® product contains two primers, a bottle of resin and a powder.



4. Pour Primer 1 onto the prepared surface.



5. Using a brush or soft broom, spread the primer across the floor. Allow it to soak into the concrete for 15-20 minutes.



6. Pour Primer 2 onto the prepared surface.



7. We supply sufficient Primer 2 to allow for very absorbent surfaces. Beware that application to less absorbent surfaces will require less than we supply.

STEP 2: MIXING



1. Empty the resin into the bucket.



2. Add in the powder. Then mix until smooth with a mixing blade.



3. Mix until it is a solid colour and a cream consistency. We recommend you mix one bucket at a time to better control quantity.

➔ The product is immediately ready for use!


STEP 3: APPLICATION



1. Once mixed, pour the concrete floor resurfacer directly on top of Primer 2.



2. Spread Flowtop® across the floor surface with a trowel. It may be convenient to work to a thin batten for depth and edge control but this must be removed before further sections are treated.

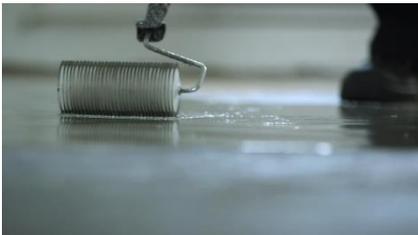

3. Finally, use the spiked roller 3-4 times in different directions to get rid of any air bubbles.

SUMMARY

- ☑ Durable and non-slip
- ☑ Extremely resistant from a depth of 3mm
- ☑ Quick and easy to apply
- ☑ Can be painted if necessary

This is the best solution to level uneven floors!

Suitable for all situations, try our premium version:

Flowtop Advanced – our strongest ever concrete resurfacer!

Contact our team of technical advisors for more information
on 01483 418 418 or email sales@watco.co.uk